



REMOTE BATTERY: CR2032

HOW TO REPLACE BATTERY

- REMOVE 5 OUTER SCREWS AROUND PRIMETER OF REMOTE
- REMOVE BACK SHELL
- REMOVE BATTERY IN PCB
- REVERSE INSTRUCTIONS TO ASSEMBLE

PAIRING INSTRUCTIONS

- POWER LIGHT 3X
- ON REMOTE HOLD UP & DOWN ARROWS FOR 1 SECOND
- WAIT 15 SECONDS FOR PAIRING

REMOTE

- ABILITY TO GO DIAGINAL BY PRESSING UP AND SIDE OR DOWN AND SIDE ARROWS AT SAME TIME
- ABILITY TO CHANGE BETWEEN FAST AND SLOW WHILE MOVING LIGHT

 TITLE: E110 remote			
SIZE B	DWG. NO.	E110 remote	REV
SCALE: 1:2			SHEET 1 OF 1